
# How to build a Hedgehög


# You will need:

- Hand Drill
- 38mm Galvanised Screws
- · Hand Saw / Circular Saw
- 3mm Drill Bit
- Countersink Bit
- Screwdriver

# Step I

Measure, mark, and cut the wood according to the following dimensions (measurements are in mm):

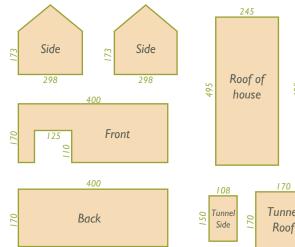

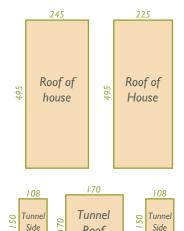

# Step 5



Secure the back between the side panels with screws.

#### Step 6

Countersink and drill the roof panels to the sides.





## Step 7

Sand any harsh edges with sandpaper. The roof can also be felted as a finishing touch, but this is optional.



Drill and countersink the top of the 'tunnel' to the sides, then secure with galvanised screws.

Step 3



Drill and countersink the 'tunnel' to front of 'house' and secure with screws.

### Step 4

Fix the sides to the front in the same manner.







# www.ukoakdoors.co.uk